





Front Seats

■ Adjusting seat position

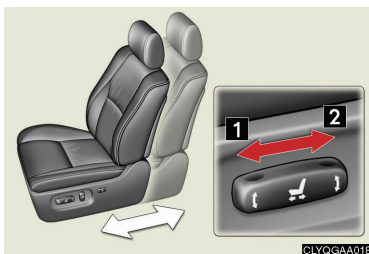


- 1 Moves the seat forward
- 2 Moves the seat backward

■ Adjusting seatback angle

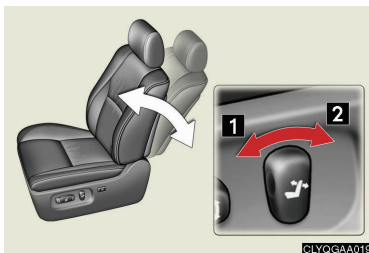


- 1 Tilts the seatback forward
- 2 Reclines the seatback

■ Adjusting the seat cushion

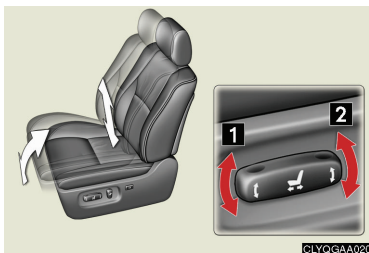

- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

■ Adjusting the lumbar support

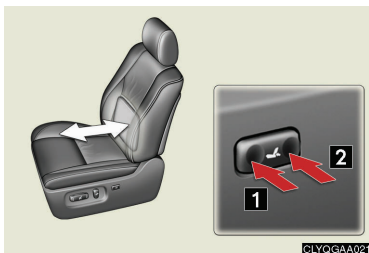

- 1 Firmer
- 2 Softer


Rear Seats

■ Adjusting seat position




With the lever raised, slide the seat forward or backward.

■ Adjusting seatback angle

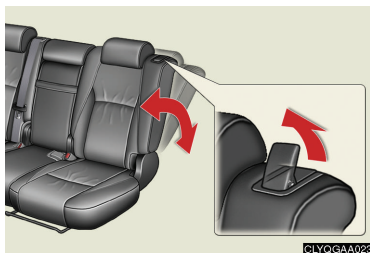

Pull the lever and tilt the seatback forward or backward.

■ Folding down the seatback

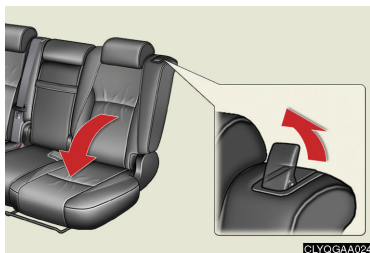

Pull the lever and fold the seatback down until it locks.

To return the seatback, pull the lever and lift the seatback up.

■ Folding down the center seatback only



Pull the lever behind the center seatback and fold the seatback down.



Driving Position Memory (If Equipped)

The driver's seat, steering wheel and outside rear view mirrors can be returned to a previously set position by simply pressing a button. Positions can be conveniently recorded for the vehicle's primary drivers.

Setting memory positions



While holding down the SET button, press and hold memory button 1 or 2 until you hear a beep.

The current position of the seat, steering wheel and outside rear view mirrors are recorded.


Recalling memory positions



Press memory button 1 or 2.

Head Restraints


Vertical adjustment

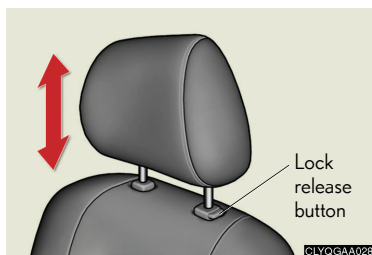

To raise: push the head restraint upward.

To lower: push the head restraint down while pressing the lock release button.

Angle adjustment (front seats only)

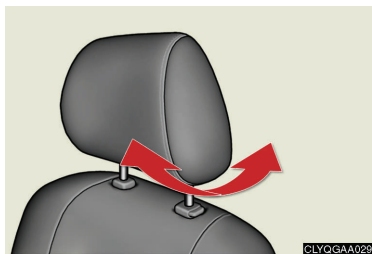


Move forward and backward.



Seatbelts

■ Adjusting shoulder belt height (front seats only)

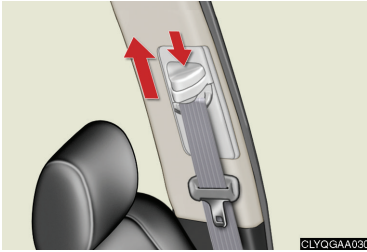


CLYOGAA030

To raise: push the anchor upward.

To lower: depress the button and push the anchor down.


■ Seatbelt comfort guides (outside rear seats only)

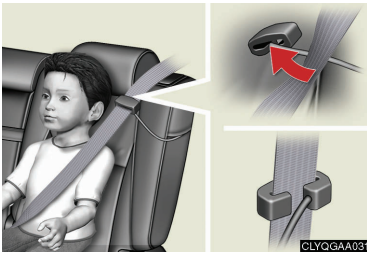

CLYOGAA031

If the shoulder belt sits close to the neck, pass the seatbelt through the comfort guide.

Outside Rear View Mirrors

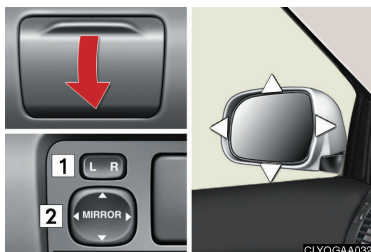


- 1 To select the mirror you wish to adjust (L or R), use the master switch.
- 2 To adjust mirror angle, use the control switch.

On vehicles with driving position memory, the mirrors will automatically angle downwards when the vehicle is reversing.

To disable this function, set the master switch in the neutral position (between L and R).

Anti-glare Inside Rear View Mirror

The anti-glare mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.

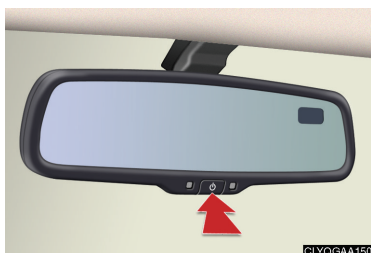

To turn the anti-glare function ON/OFF, press and hold the button for 3 seconds.

The indicator comes on when the anti-glare function is turned ON.




Steering Wheel

Manually adjustable type



To adjust the steering wheel, pull the lever up while holding the steering wheel, tilt the steering wheel to the desired angle, and release the lever.

Power-adjustable type

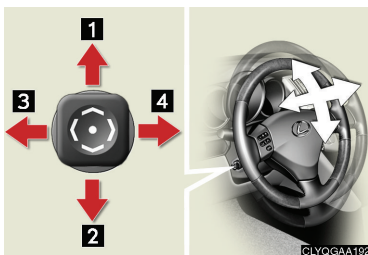

- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

The power-adjustable type steering wheel retracts automatically when the key is removed from the engine switch to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the key is inserted into the engine switch.